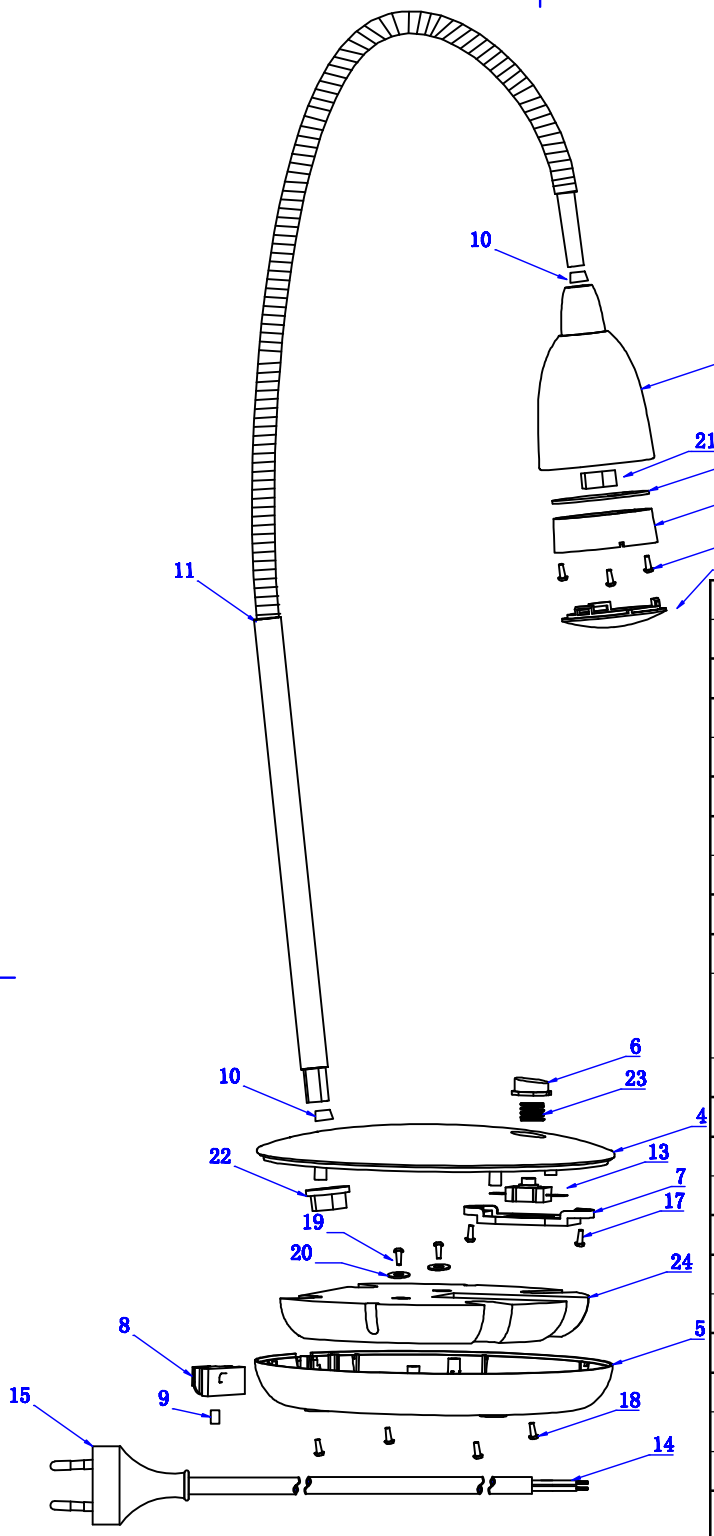

24	损耗件	38#配重块
23	螺丝类	DE1215N开关弹簧
22	螺丝类	M10法兰面螺母
21	螺丝类	M10外六角螺母
20	螺丝类	D5.5平垫
19	螺丝类	ST2.9×8十字盘头 带垫
18	螺丝类	ST2.9×10十字盘头
17	螺丝类	ST2.9×6 B型十字盘头
16	螺丝类	ST2.5×8十字盘头
15	电子	DE1215N插头线
14	电子	DE1215N内部导线
13	电子	KAN-29A按钮开关
12	电子	25#光源
11	金属	44#软管
10	塑料	5#护套
9	塑料	M6×6塑料螺丝
8	塑料	2#线扣
7	塑料	DE0726L开关固定座
6	塑料	DE1215N开关帽
5	塑料	DE1215N底盘下盖
4	塑料	DE1215N底盘上盖
3	塑料	DE1215N光源压圈
2	塑料	15#透光罩
1	塑料	DE1215N灯罩

标记	处数	分区	更改文件号	签名	年月日
设计			标准化		
审核					
工艺			批准		

阶段标记	重量	比例
S		
共 张 第 张		

宁波正耀照明电器有限公司

DE1215N爆炸图

DE1215N.0

LIGHT SOURCE REMOVING INSTRUCTION			Creation date (dd/mm/yyyy) :	
			Last update date (dd/mm/yyyy) :	
1	General information	Supplier's name or trade mark		
2		Supplier's address		
3		Model Identifier - Luminaire Supplier reference		
4		Light sources maker model	87#	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Remove the transparent cover using a straight screwdriver	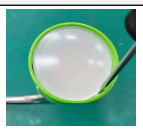	straight screwdriver
Step 2	Use a Phillips screwdriver to remove the screws ,then remove the light source pressure ring	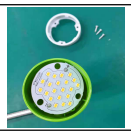	Phillips screwdriver
Step 3	Use scissors to cut the wire and remove the light source	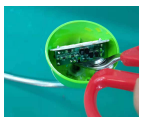	scissors
Step 4			
Step 5			
Step 6			
Step 7			
Step 8			
Step 9			
Step 10			