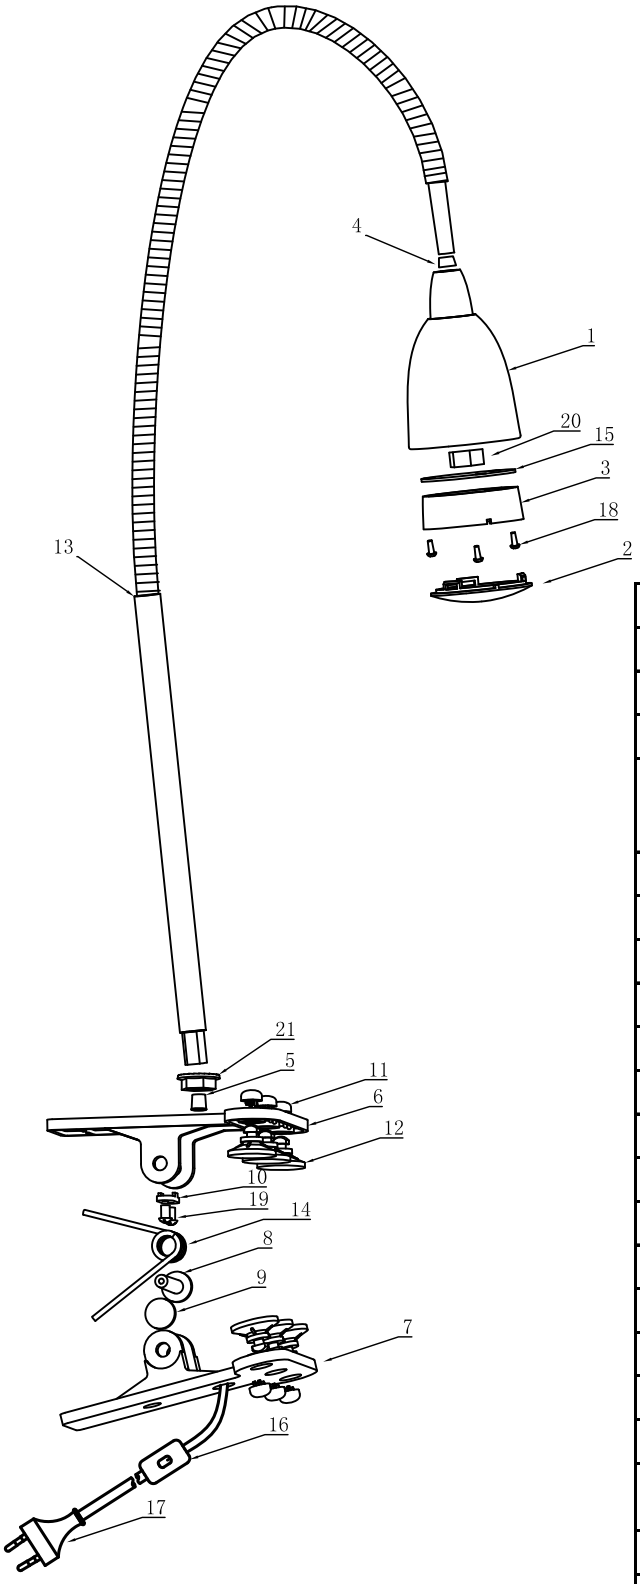

序号	材料属性	配件名称
21	螺丝类	M10法兰面螺母
20	螺丝类	M10外六角螺母
19	螺丝类	ST2.9×10十字盘头
18	螺丝类	ST2.5×6十字盘头
17	电子	CE1215N插头线
16	电子	303线上开关
15	电子	光源
14	金属	CS0901A夹子扭力弹簧
13	金属	48#软管
12	塑料	1#夹子吸盘F
11	塑料	1#夹子闷盖E
10	塑料	1#压线片
9	塑料	1#夹子插销件D
8	塑料	1#夹子插销件C
7	塑料	1#夹子组件B
6	塑料	1#夹子组件A
5	塑料	5#护套
4	塑料	1#护套
3	塑料	DE1215N光源压圈
2	塑料	15#透光罩
1	塑料	DE1215N灯罩

标记	处数	分区	更改文件号	签名	年月日

设计			标准化		
审核					
工艺			批准		

阶段标记	重量	比例
S		

共 张 第 张

宁波正耀照明电器有限公司

CE1215N爆炸图

CE1215N.0

LIGHT SOURCE REMOVING INSTRUCTION			Creation date (dd/mm/yyyy) :	
			Last update date (dd/mm/yyyy) :	
1	General information	Supplier's name or trade mark		
2		Supplier's address		
3		Model Identifier - Luminaire Supplier reference		
4		Light sources maker model	87#	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Remove the transparent cover using a straight screwdriver	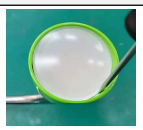	straight screwdriver
Step 2	Use a Phillips screwdriver to remove the screws ,then remove the light source pressure ring	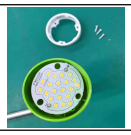	Phillips screwdriver
Step 3	Use scissors to cut the wire and remove the light source	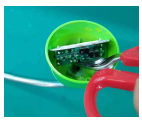	scissors
Step 4			
Step 5			
Step 6			
Step 7			
Step 8			
Step 9			
Step 10			